



655 Eisenhower Drive
 Owatonna, MN 55060 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (507) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063

Form No. 105816


**Parts List &
 Operating Instructions**
 for:

7704

Four Wheel Drive Ball Joint Service Kit

Application: Used with OTC Ball Joint Press & Service Tools (7248 & 7249) to remove and install the upper and lower ball joints on 1967 - current 4WD vehicles with Dana 44 axles.

Parts List

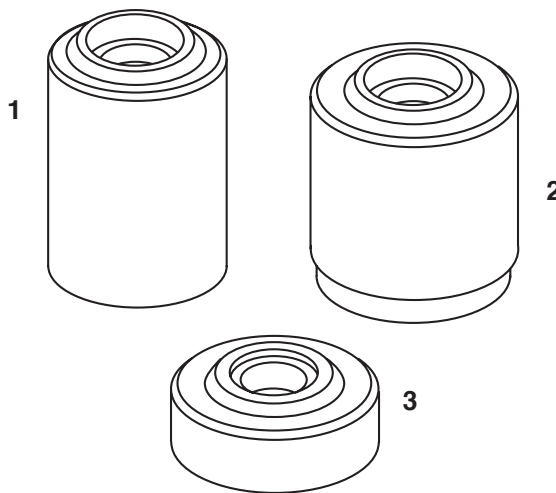

Item No.	Part No.	No. Req'd	Description
1	38355A	1	Installing Cup
2	38354	1	Receiving Cup
3	204508A	1	Receiving Cup

Safety Precautions



Caution: To prevent personal injury when using these tools,



- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.



- Before repairing a vehicle, block the wheels to prevent the vehicle from moving.



- Check the final alignment of tooling and components before using a C-frame press to exert pressure.

Sheet No. 1 of 1

Issue Date: Rev. C August 12, 2014

Operating Instructions

Removal

1. Remove the knuckle assembly from the vehicle according to the instructions in the service manual.

Note:

- It may be necessary to remove the steering arm before servicing the upper ball joint on the left hand knuckle.
- The lower ball joint must be removed before any service can be performed on the upper ball joint.

2. Remove the lower ball joint snap ring.

3. Assemble the ball joint press over the ball joint as shown in Figure 1.

4. Turn the forcing screw until it meets the ball joint. Check the alignment of all components. Tighten the forcing screw until the ball joint is removed.

5. Repeat Steps 3 & 4 to remove the upper ball joint.

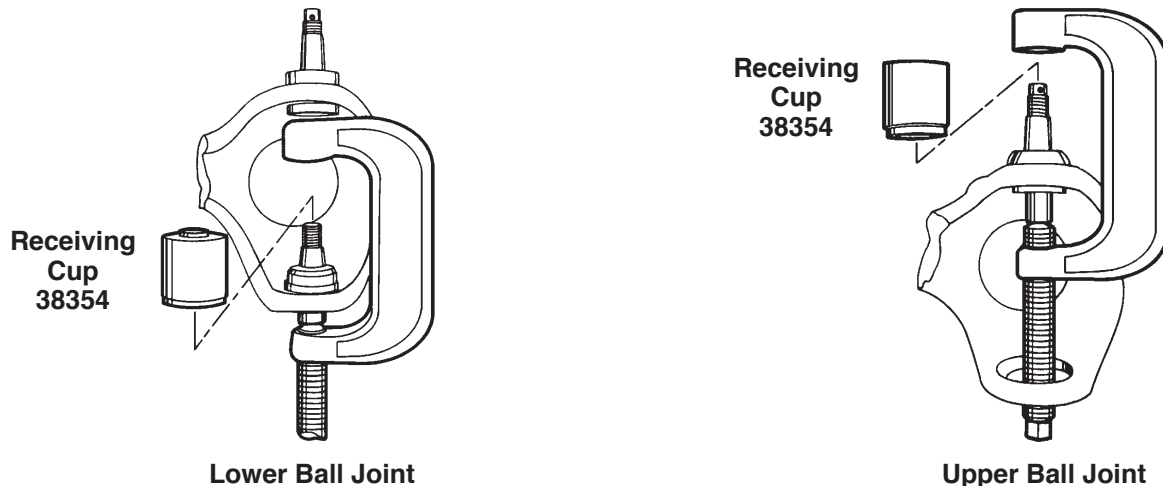


Figure 1

Installation

Note: The lower ball joint must be installed before the upper ball joint.

1. Clean the knuckle and coat it with a suitable lubricant.
2. Assemble the ball joint into the knuckle.
3. Assemble the ball joint press components as shown in Figure 2. Check the alignment of all components. Tighten the forcing screw until the ball joint is firmly seated.
4. Install the snap ring on the lower ball joint.
5. Repeat Steps 1-3 to install the upper ball joint.
6. Install the knuckle assembly to the vehicle according to the vehicle service manual procedures.

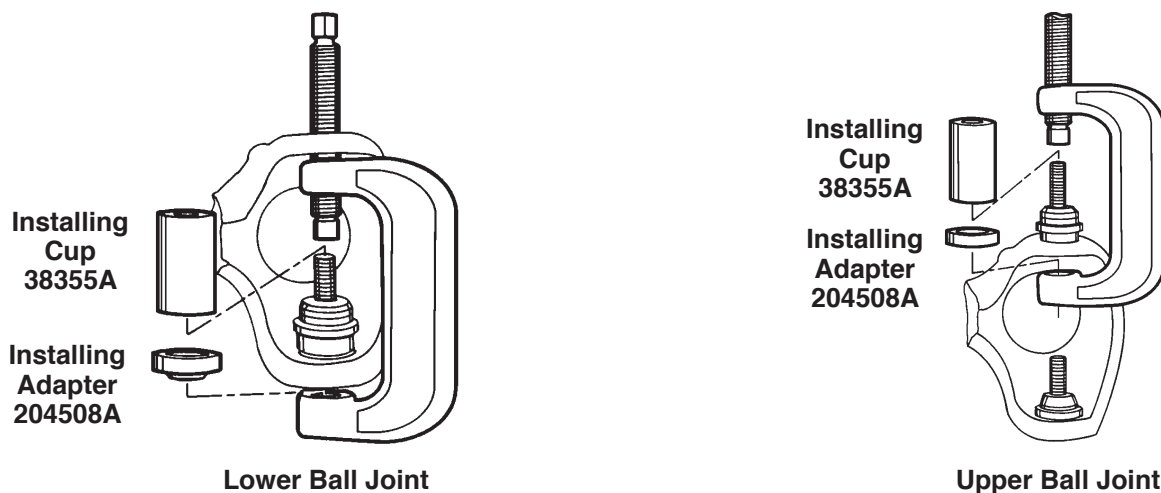


Figure 2