




655 Eisenhower Drive  
Owatonna, MN 55060 USA  
Phone: (507) 455-7000  
Tech. Serv.: (800) 533-6127  
Fax: (800) 955-8329  
Order Entry: (800) 533-6127  
Fax: (800) 283-8665  
International Sales: (507) 455-7223  
Fax: (507) 455-7063  
Website: www.otctools.com

Form No. 106272


Operating Instructions  
for:

6067


## Ford Injector Remover / Installer Kit

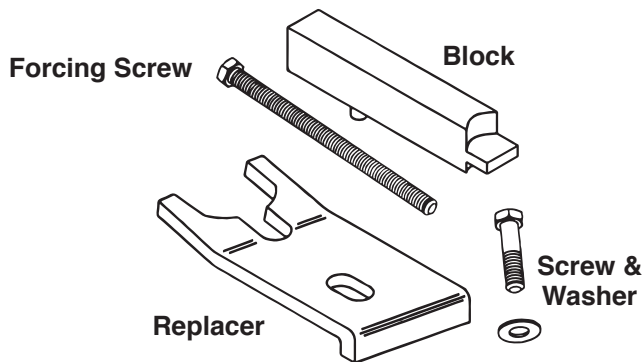

*Application: 7.3L DIT diesel engines  
used on 1994 & newer 3/4- and 1-ton  
trucks, vans, & Super Duty trucks*

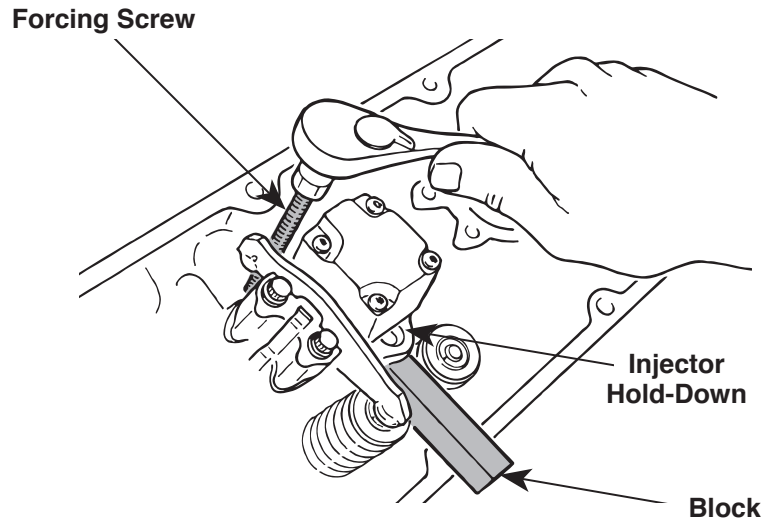

**Figure 1**

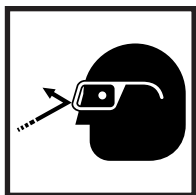

**CAUTION:** To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.


### Removing the Injector (Figure 1)

1. Place the block under the injector hold-down.
2. Thread the forcing screw through the top corner of the injector hold-down, and draw the injector out of the head.

### Replacing the Injector (Figure 2)

1. Place the injector into the injector bore in the head.
2. Using the replacer and screw, seat the injector in the head by tightening the screw into the valve cover attaching screw hole.

*Refer to the vehicle service manual for the complete procedure.*

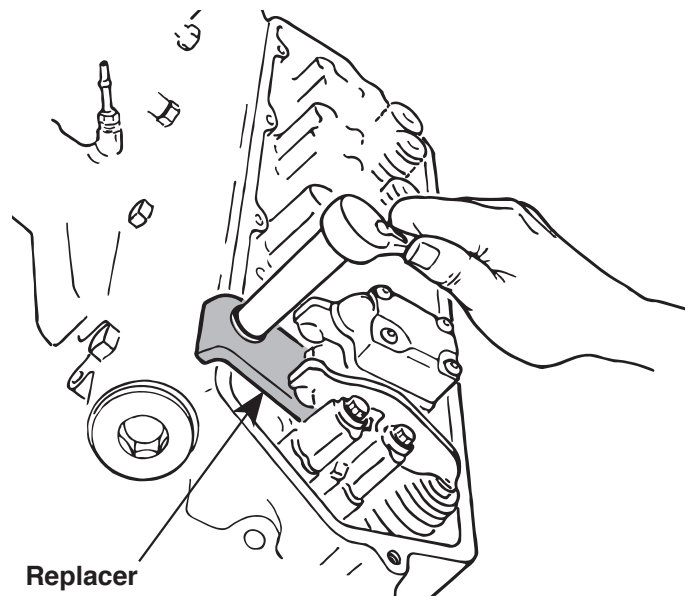

**Figure 2**

Sheet No. 1 of 1

Issue Date: Rev. B, May 4, 2016