

# Cummins Diesel Fuel Injector Remover Kit

Form No. 106274

Operating Instructions  
for:

6069

Application: 1998<sup>1/2</sup> - newer Dodge trucks and vans with 5.9L, 24-valve Cummins diesel engine.


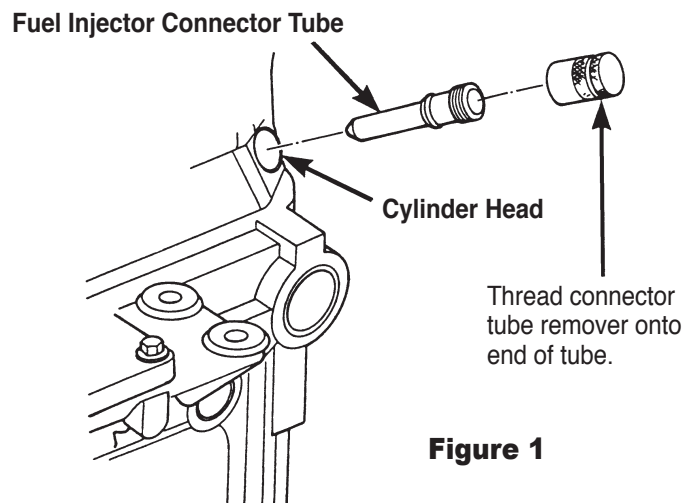


Figure 1

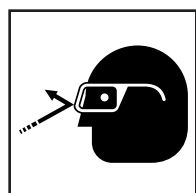

**CAUTION:** To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.

1. Remove necessary high pressure fuel lines. DO NOT BEND ANY HIGH PRESSURE FUEL LINE TO GAIN ACCESS TO THE FUEL INJECTOR. Cover or cap any open fuel connections.
2. Remove the valve cover.
3. Thread the fuel injector connector tube remover onto the end of the injector connector tube. Pull the tube from the cylinder head. See Figure 1.

**Caution:** Remove the injector connector tube before attempting to remove the fuel injector. Failure to perform this step could damage the fuel injector and tube.

4. Remove the hold down clamp bolt at the front end of the clamp. DO NOT LOOSEN OR REMOVE THE SHOULDER BOLT AT THE REAR END OF THE CLAMP. Remove the injector clamp by sliding it away from the shoulder of the rear clamp bolt. See Figure 2.
5. Thread the puller rod into the top of the fuel injector. See Figure 3.
6. Tighten the puller nut to remove the fuel injector from the cylinder head.

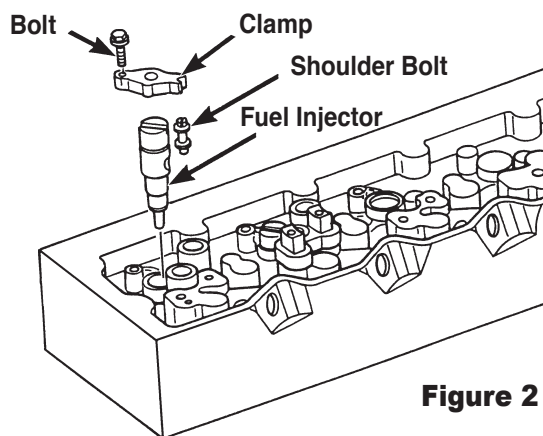


Figure 2

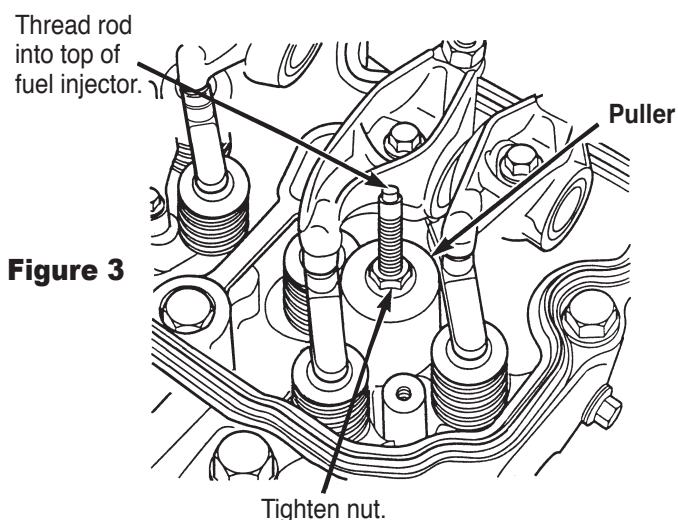


Figure 3