

SPX Division 655 Eisenhower Drive Owatonna MN 55060 Phone: (507) 455-7000 Tech. Serv.: (800) 533-6127 Fax: (800) 955-8329 Order Entry: (800) 533-6127 Fax: (800) 283-8665 International Sales: (507) 455-7223 Fax: (507) 455-7063

Operating Instructions for:

6293


No. 6293 Chrysler Distributor Bushing Installer

Use the following steps to install a bushing into an engine block using the No. 6293 distributor bushing installer.

1. Slide the new bushing over the burnishing end of the installer. See Figure 1.

Note: It is normal for the bushing to fit tightly on the burnishing end of the installer.

- 2. Insert the installer and bushing into the distributor hole in the engine block. Drive the bushing into position by tapping on the installer with a hammer. See Figure 2.
- 3. Slide the installer adapter into the distributor hole in the engine block, and hand tighten the installer nut to the installer adapter.
- 4. Hold the installer screw with a 3/8" wrench and tighten the installer nut with a 7/8" wrench. This pushes the burnishing end through the bushing to expand the bushing tight in the block and burnish the bushing to the correct size. See Figure 3.

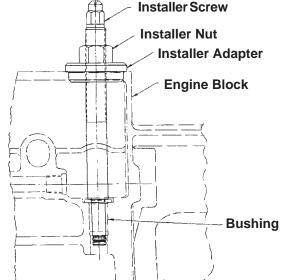

Note: The bushing does *not* need to be reamed.



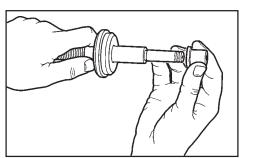


Figure 1



 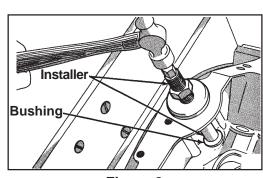



Engineering View

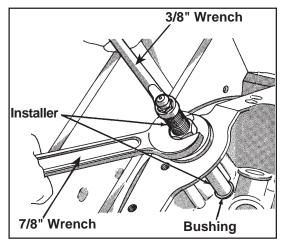


Figure 3

Sheet No.	1 of 1	
Issue Date:	Rev. A	10-31-02