



SPX Corporation
 655 Eisenhower Drive
 Owatonna, MN 55060-0995 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063

Form No. 524593

Assembly Instructions

for:


520268

© 2003 SPX Corporation Rev. A, 12-9-03

**Saddle and Rubber Pad
 for 1526 Quick Lift Jack**

This saddle is provided to you as an optional component. It is larger than the saddle originally shipped with the Quick Lift Jack, and it is equipped with a large, soft, rubber pad. If you wish to install this saddle on your jack, follow these instructions :

1. Close the release valve on the jack by turning the handle clockwise.
2. Pump the jack handle to raise the jack completely to its travel stops.
3. Position the jack on its side.
4. Use a snap ring pliers to remove the snap ring from the bottom of the saddle.
5. Remove the old saddle, and insert the new saddle with the rubber pad.
6. Install the snap ring, being careful to correctly seat the snap ring into the snap ring groove.
7. Position the jack back on its wheels. The jack is now ready for service.

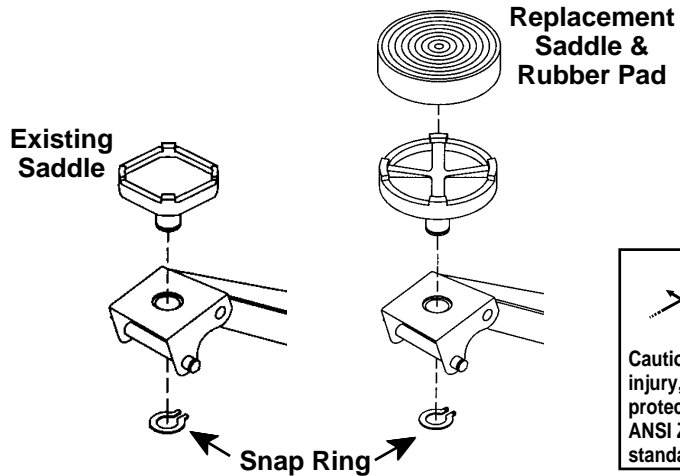

SPX Corporation
 655 Eisenhower Drive
 Owatonna, MN 55060-0995 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063

Form No. 524593

Assembly Instructions

for:

520268

© 2003 SPX Corporation Rev. A, 12-9-03

**Saddle and Rubber Pad
 for 1526 Quick Lift Jack**

This saddle is provided to you as an optional component. It is larger than the saddle originally shipped with the Quick Lift Jack, and it is equipped with a large, soft, rubber pad. If you wish to install this saddle on your jack, follow these instructions :

1. Close the release valve on the jack by turning the handle clockwise.
2. Pump the jack handle to raise the jack completely to its travel stops.
3. Position the jack on its side.
4. Use a snap ring pliers to remove the snap ring from the bottom of the saddle.
5. Remove the old saddle, and insert the new saddle with the rubber pad.
6. Install the snap ring, being careful to correctly seat the snap ring into the snap ring groove.
7. Position the jack back on its wheels. The jack is now ready for service.

