



655 Eisenhower Drive
Owatonna, MN 55060 USA
Phone: (507) 455-7000
Tech. Serv.: (800) 533-6127
Fax: (800) 955-8329
Order Entry: (800) 533-6127
Fax: (800) 283-8665
International Sales: (507) 455-7223
Fax: (507) 455-7063

Form No. 525969

Parts List &
Operating Instructions
for:

5082

Wheel Tipper

SAFETY PRECAUTIONS



CAUTION: To prevent personal injury and damage to equipment,



- If the operator cannot read English, operating instructions and safety precautions must be read and discussed in the operator's native language.



- Wear protective eyewear that meets the requirements of ANSI Z87.1 and OSHA.
- To prevent injury, do not let go of the handle once the wheel has started to tilt.
- Do not leave wheel unattended in an upright position.
- Use the wheel tipper for lifting wheels only.

Operating Instructions

To raise the wheel

1. Deflate the tire and break the tire bead.
2. With the tire mounting flange against the floor, hook the wheel tipper to the rim of the wheel as shown in Figure 1.
3. Stand on the floor on the opposite side of the wheel from the wheel tipper.
4. Place both hands on the grip end of the tool.

WARNING! To prevent injury, do not let go of the handle once the wheel has started to tilt.

5. Slowly pull the handle of the wheel tipper towards you to raise the wheel to a standing position. See Figures 2 and 3.
6. Once the wheel is standing, remove the wheel tipper.

To lower the wheel

1. Hook the wheel tipper to the rim of the wheel.
2. With both hands on the wheel tipper, push on the handle of the wheel tipper to start the wheel moving towards the floor, *then slowly* finish lowering the wheel to the floor.

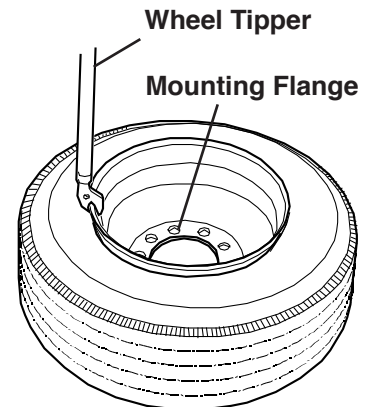


Figure 1

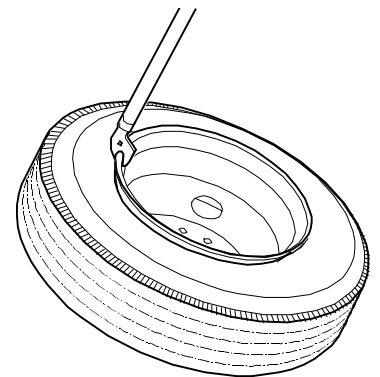


Figure 2

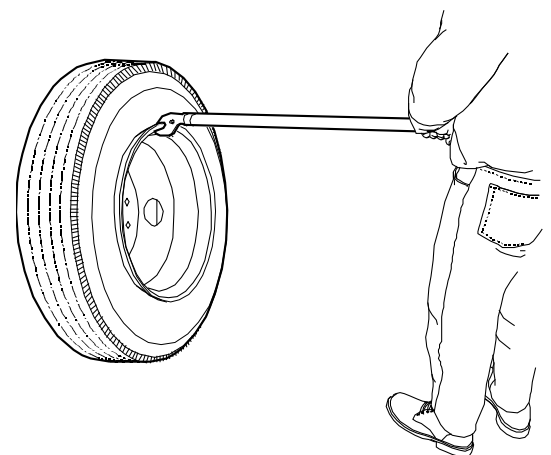


Figure 3

Sheet No. 1 of 1

Issue Date: Rev. C, June 6, 2014

