



655 Eisenhower Drive
 Owatonna, MN 55060-0995 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063
 Website: www.otctools.com

Form No. 566545

Parts List and Operating Instructions

for:

1772D

1773D

Jack Stand

Max. Capacity: 3 Tons (1772D) & 6 Tons (1773D)


Safety Precautions



WARNING: To prevent personal injury,



- Study, understand, and follow all operating instructions and safety precautions before operating this device.

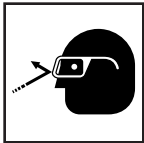

- Wear eye protection that meets ANSI Z87.1 and OSHA standards.

- Inspect the jack stand before each use; do not use the jack stand if it is damaged, altered, or in poor condition.



- Never exceed the rated support capacity of the jack stand.

- Use the jack stands in pairs on smooth, hard, level surfaces. Soft or irregular surfaces may not provide enough support, and the stands could tip.

- Center the load on the saddle; do not support the load with the raised part of the saddle.


- Block the vehicle wheels to prevent movement. Check the jack stands for solid contact with the ground and the vehicle. Each jack stand's locking handle must be fully engaged in the ratchet bar teeth. Check the vehicle by trying to rock the load. The jack stands and the load must be stable before working under the vehicle.

- Do not use jack stands to simultaneously support both ends of a vehicle.

- No alterations shall be made to this product.

Setup

1. Install the ratchet bar into the frame with the ratchet portion of the bar aligned with the locking pawl (stopper).
2. Move the ratchet bar to its lowest position by raising the locking handle (which releases the stopper) and guiding the bar downward.
3. Use a hammer and punch to tap the tab into position (almost touching the ratchet bar). When the ratchet bar is extended, the tab will catch on a lip, preventing over-extension of the ratchet bar.

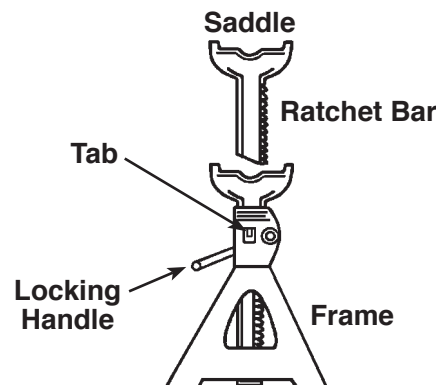

Sheet No. 1 of 1

Issue Date: Rev. A, August 7, 2012

Operating Instructions

1. Plan the location of the jack stands in pairs, so the load will be balanced.
2. Raise each jack stand's ratchet bar up to the load. Position each saddle under the load, so the load will be centered on the saddle after it is lowered.
3. Verify each jack stand's locking handle is fully engaged in the teeth of the ratchet bar. The weight of the locking handle should secure the ratchet bar in the desired position; verify this by pushing down on the locking handle.
4. Slowly and carefully lower the load onto the jack stands.
5. If the load is a vehicle, block the wheels to prevent movement. **DO NOT WORK UNDER THE VEHICLE UNTIL THE LOAD AND JACK STANDS ARE STABLE.**

Lowering a Load

1. With a suitable jack, raise the vehicle clear of the jack stands.
2. On each jack stand, carefully release the locking handle, and allow the ratchet bar to glide down to its lowest position.
3. Remove the jack stands, and lower the vehicle.

Maintenance

Periodically inspect each jack stand. Ensure all parts move freely. Do not apply oil or grease to any part of the jack stand.