



SPX Corporation  
655 Eisenhower Drive  
Owatonna, MN 55060-0995 USA  
Phone: (507) 455-7000  
Tech. Serv.: (800) 533-6127  
Fax: (800) 955-8329  
Order Entry: (800) 533-6127  
Fax: (800) 283-8665  
International Sales: (507) 455-7223  
Fax: (507) 455-7063

Form No. 106137


**Parts List &  
Operating Instructions  
for:**

**7920**



## Lower Ball Joint Adapter Set

Application: 1996 and newer GM 4WD 1/2- and 3/4-ton Pickups, Suburbans, and Yukons / Tahoes

**No. 222306  
Receiving Tube**

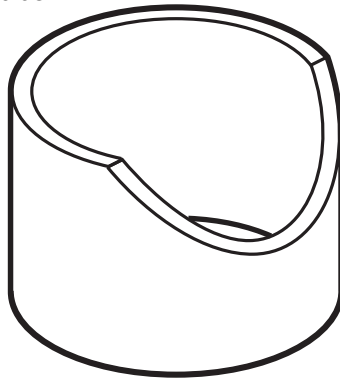

**No. 222307  
Receiving Tube**

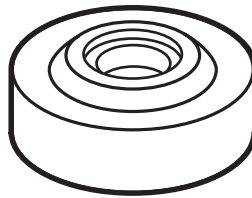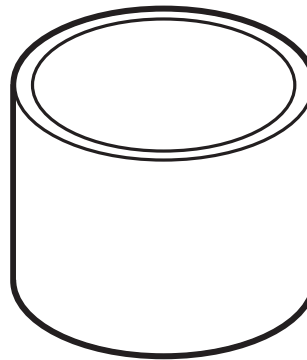

**No. 204508A  
Receiving Cup**

### Safety Precautions



**Caution:** To prevent personal injury when using these tools,



- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.
- Before repairing a vehicle, block the wheels to prevent the vehicle from moving.



- Check the final alignment of tooling and components before using a C-frame press to exert pressure.




Shaded areas reflect  
the last revisions  
made to this form.

Sheet No. 1 of 1


Issue Date: Rev. B, 12-27-06

## Operating Instructions

1. Position the tools as shown to remove or install the upper or lower ball joint. **Note for Installation:** Clean the control arm or knuckle, and coat the I.D. with a suitable lubricant.
2. Tighten the forcing screw until it meets the cup, and check the alignment of all tooling and components. Continue tightening the forcing screw until the ball joint is removed or installed.

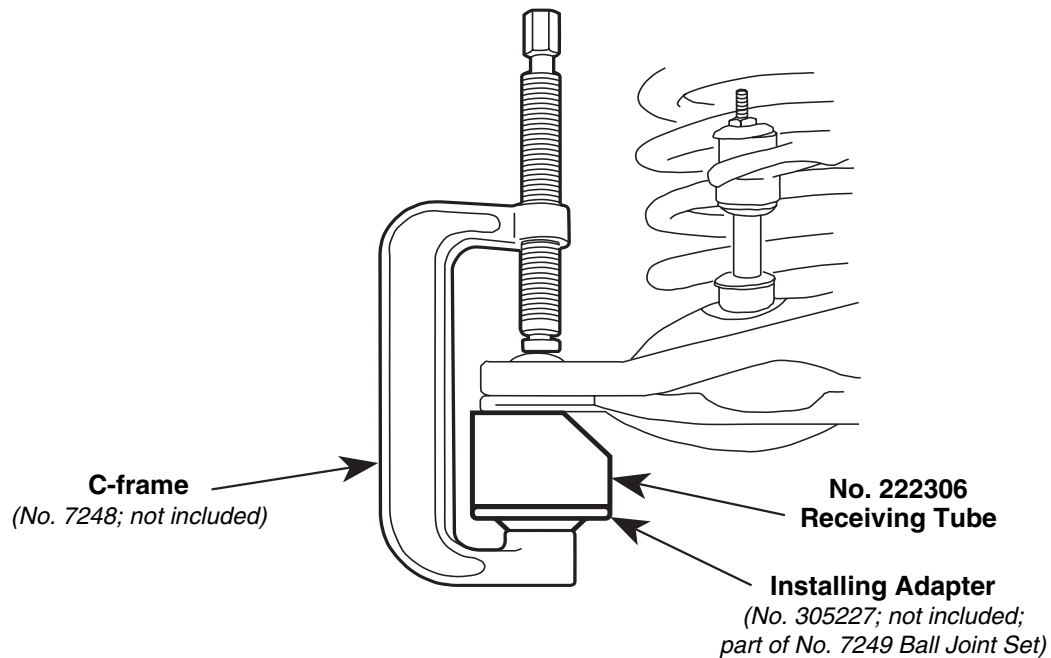

## Removing the Lower Ball Joint

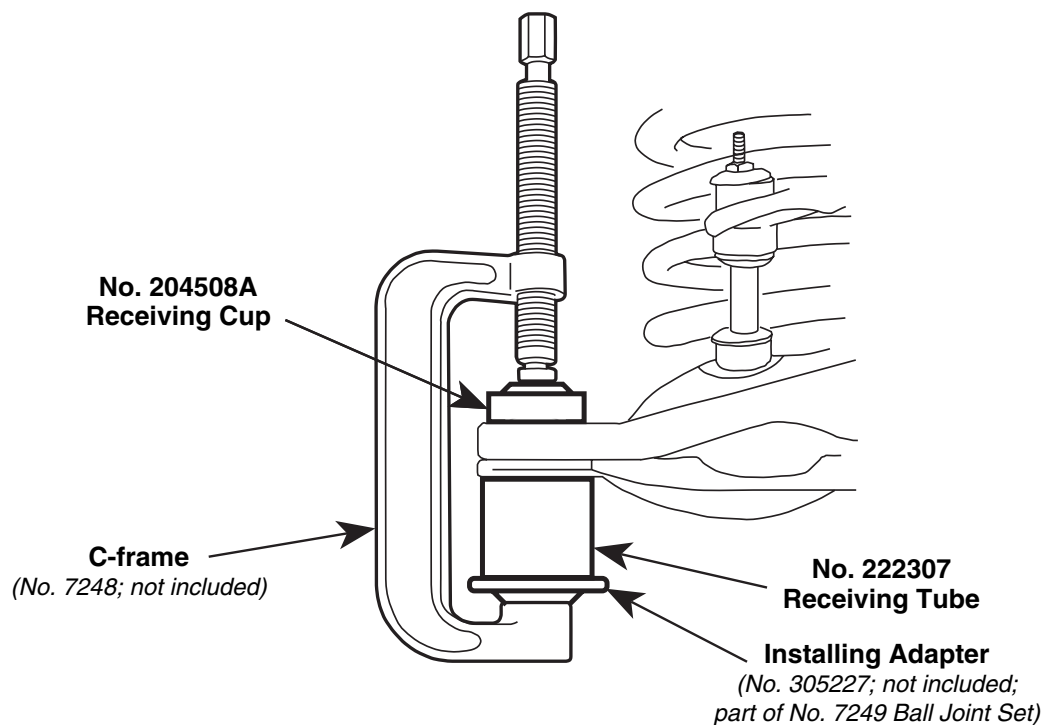

## Installing the Lower Ball Joint