




655 Eisenhower Drive
 Owatonna, MN 55060 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7290
 Fax: (507) 455-7063
 Website: www.otctools.com

Form No. 107095

Operating Instructions for: **6471**
(511538)

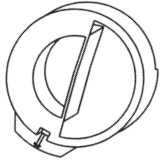

Ford Camshaft Sensor Synchronizer Tool



Application: 1993 – 1995 3.0L V6 Ford Taurus/Mercury Sable

Note: Same as Ford No. 303-453 (T93P-12200-A).

CAUTION: Before removing the camshaft sensor housing assembly, note the position of the camshaft sensor electrical connector. The connector **MUST** be reassembled in the same position during installation.

1. Rotate crankshaft to set No. 1 cylinder at top dead center of compression stroke.
2. Engage camshaft sensor housing vane in slot of tool No. 6471 (511538).
3. Rotate tool on camshaft sensor housing until tool engages housing notch. (Tool should be square and in contact with entire top of housing.)
4. Install camshaft sensor housing and tool assembly into engine according to instructions in the vehicle service manual. Torque fasteners to factory specifications.

No. 6471
 (511538)

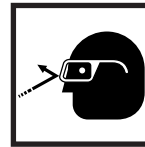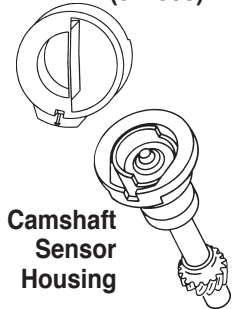

WARNING: Wear eye protection that meets ANSI Z87.1 and OSHA standards.


Rev. C, January 19, 2015
 © Bosch Automotive Service Solutions Inc.



655 Eisenhower Drive
 Owatonna, MN 55060 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7290
 Fax: (507) 455-7063
 Website: www.otctools.com

Form No. 107095

Operating Instructions for: **6471**
(511538)

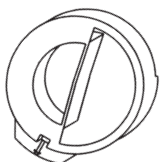

Ford Camshaft Sensor Synchronizer Tool



Application: 1993 – 1995 3.0L V6 Ford Taurus/Mercury Sable

Note: Same as Ford No. 303-453 (T93P-12200-A).

CAUTION: Before removing the camshaft sensor housing assembly, note the position of the camshaft sensor electrical connector. The connector **MUST** be reassembled in the same position during installation.

1. Rotate crankshaft to set No. 1 cylinder at top dead center of compression stroke.
2. Engage camshaft sensor housing vane in slot of tool No. 6471 (511538).
3. Rotate tool on camshaft sensor housing until tool engages housing notch. (Tool should be square and in contact with entire top of housing.)
4. Install camshaft sensor housing and tool assembly into engine according to instructions in the vehicle service manual. Torque fasteners to factory specifications.

No. 6471
 (511538)

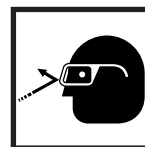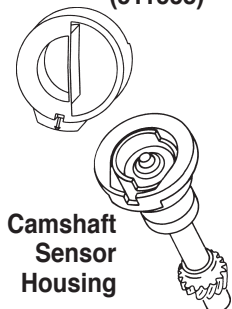

WARNING: Wear eye protection that meets ANSI Z87.1 and OSHA standards.

Rev. C, January 19, 2015
 © Bosch Automotive Service Solutions Inc.