

655 Eisenhower Drive Owatonna, IVIN 55000 511 Phone: (507) 455-7000 Tech. Serv.: (800) 533-6127 Fax: (800) 955-8329

Order Entry: (800) 533-6127 Fax: (800) 283-8665

International Sales: (507) 455-7290

Fax: (507) 455-7063

**Operating Instructions** for:

6479 (511547)

## Ford Crankshaft Holding Tool

Application: 1997 – 2011 4.0L SOHC Explorer (V6), Mountaineer (V6), Ranger (VIN E)


1997 – 2008 4.0L SOHC Explorer, Mountaineer, Ranger (VIN X)

2005 - 2010 4.0L SOHC Mustang (VIN N)

NOTE: Same as Ford No. 303-573 (T97T-6303-A).

1. Install tool No. 6479 (511547) on the crankshaft damper.

- 2. Rotate the engine counterclockwise (CCW) until the tool stops against the engine block.
- 3. Service the timing chain as required according to instructions in the vehicle service manual.
- 4. Torque fasteners to factory specifications.

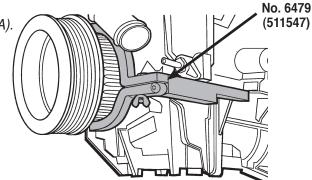



WARNING: Wear eye protection that meets ANSI Z87.1 and OSHA standards.

© Bosch Automotive Service Solutions LLC July 25, 2014 Rev. C



655 Eisenhower Drive Owatonna, MN 55060 USA Phone: (507) 455-7000 Tech. Serv.: (800) 533-6127 Fax: (800) 955-8329

Order Entry: (800) 533-6127 Fax: (800) 283-8665

International Sales: (507) 455-7290

Fax: (507) 455-7063

Form No. 107103

**Operating Instructions** for:

6479

(511547)

## Ford Crankshaft Holding Tool

Application: 1997 – 2011 4.0L SOHC Explorer (V6), Mountaineer (V6), Ranger (VIN E)


1997 - 2008 4.0L SOHC Explorer, Mountaineer, Ranger (VIN X)

2005 - 2010 4.0L SOHC Mustang (VIN N)

NOTE: Same as Ford No. 303-573 (T97T-6303-A).

1. Install tool No. 6479 (511547) on the crankshaft damper.

- 2. Rotate the engine counterclockwise (CCW) until the tool stops against the engine block.
- 3. Service the timing chain as required according to instructions in the vehicle service manual.
- Torque fasteners to factory specifications.

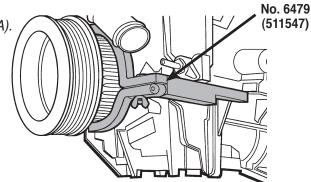



**WARNING:** Wear eye protection that meets ANSI Z87.1 and OSHA standards.